


## Fiedler Classroom 0087

### Instructions for the use of the Presentation System

#### To turn the projector on:

- Locate the **Projector Remote Control** on the presentation desk and press the **Power** button.
- At the start up, the **preparation screen** will display a 30 second countdown. After the countdown, the projector will display the input that is selected.

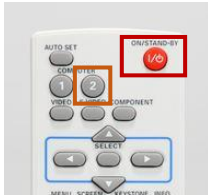

**Projector Remote Control**



**Preparation Screen**

#### To turn the projector off:

- Locate the **Projector Remote Control** on the presentation desk and press the **Power** button.
- Power Off? Will be displayed on the screen. Press the **Power** button again to turn the projector off.



**Power Off Screen**

#### To use the presentation computer:

- After powering on the projector, if the computer is not displayed:
  - Turn the **Input switcher** select button to Desktop.
  - On the **Projector Remote Control** press the Computer 2 button until the input is on PC Digital.
- It may be necessary to tell the desktop to direct signal to the projector. Locate the "⌨" key on the keyboard, hold it down and press the "P" key simultaneously. **Windows System display mode** will appear (see below), and you will want to select "Duplicate".



**Input Switcher**



**Windows System Display Mode**

**Please see reverse side for additional instructions.**

### **To use the document camera:**

- Power on the Elmo device.
- Turn the **Input Switcher** to Document Camera.
- On the **Projector Remote Control** press the Computer **2** button until the input is on AV HDCP.
- **Note:** When you are finished, please kindly change the switch back to Desktop so as to avoid confusion for the next presenter.

### **To use the Laptop:**

- Attach the VGA cable to your laptop.
- Turn the **Input Switcher** to Laptop.
- On the **Projector Remote Control** press the Computer **2** button until the input is on AV HDCP.
- **Note:** When you are finished, please kindly change the switch back to Desktop so as to avoid confusion for the next presenter.

**WARNING:** Security software on this computer will erase all changes made on the next reboot. This includes any files or data you may have created. These lost files are non-recoverable. To use a network drive for your data, please use the “ENGG Login” shortcut located on the desktop of the computer.

**Please see reverse side for additional instructions.**